



BW T Disinfecton Disinfection plant

For You and Planet Blue.

Thank you for having the confidence in coherence with your purchase of our BWT Disinfecton. The following Quick guide will describe how the installation and the commission are done easy and fast.

1 Security instructions



Danger caused by electrical current or voltage. Always consult an electrician, when you work on places where this sign is mentioned.



Only used educated and trained people. Establish clear responsibilities for operation, setup, maintenance and repair.



Never operate the BWT Disinfecton while the lid is open.



The floor should have a slightly fall against a functional floor drain from the installation. The water must be able to run unobstructed from the plant to the drain.

2 Installation and requirements

Installation requirement for BWT Disinfecton

Water connection:

- Nipple 3/4"
- Water pressure: 1.5 – 4.0 by 15 L/h
- Min. water flow: 15 L/h

Surroundings:

- Room temperature: 5 – 40 degrees
- Room ventilation: 7 – 12 m³/l
- Water temperature: 5 – 25 degrees
- Drain: Max 5 m, 0.2 bars Counterpressure.

Electrical connections:


- Cable with CEE 3 m
- Current 13 A
- Voltage: 230 V AC; 50/60 Hz
- Water meter cable: 2 x 0.5 mm²

3 Important notes

- When commissioning it is important to remove the air from the filter. On the top of the filter there is a black button that will remove the air.
- Make sure that dosing is set to proportional dosing.
- The PLC in the BWT Disinfecton have to be set to dose 0.2 ppm. See machine manual for further information.

4 Installation illustration

The picture underneath displays how the installation should be.

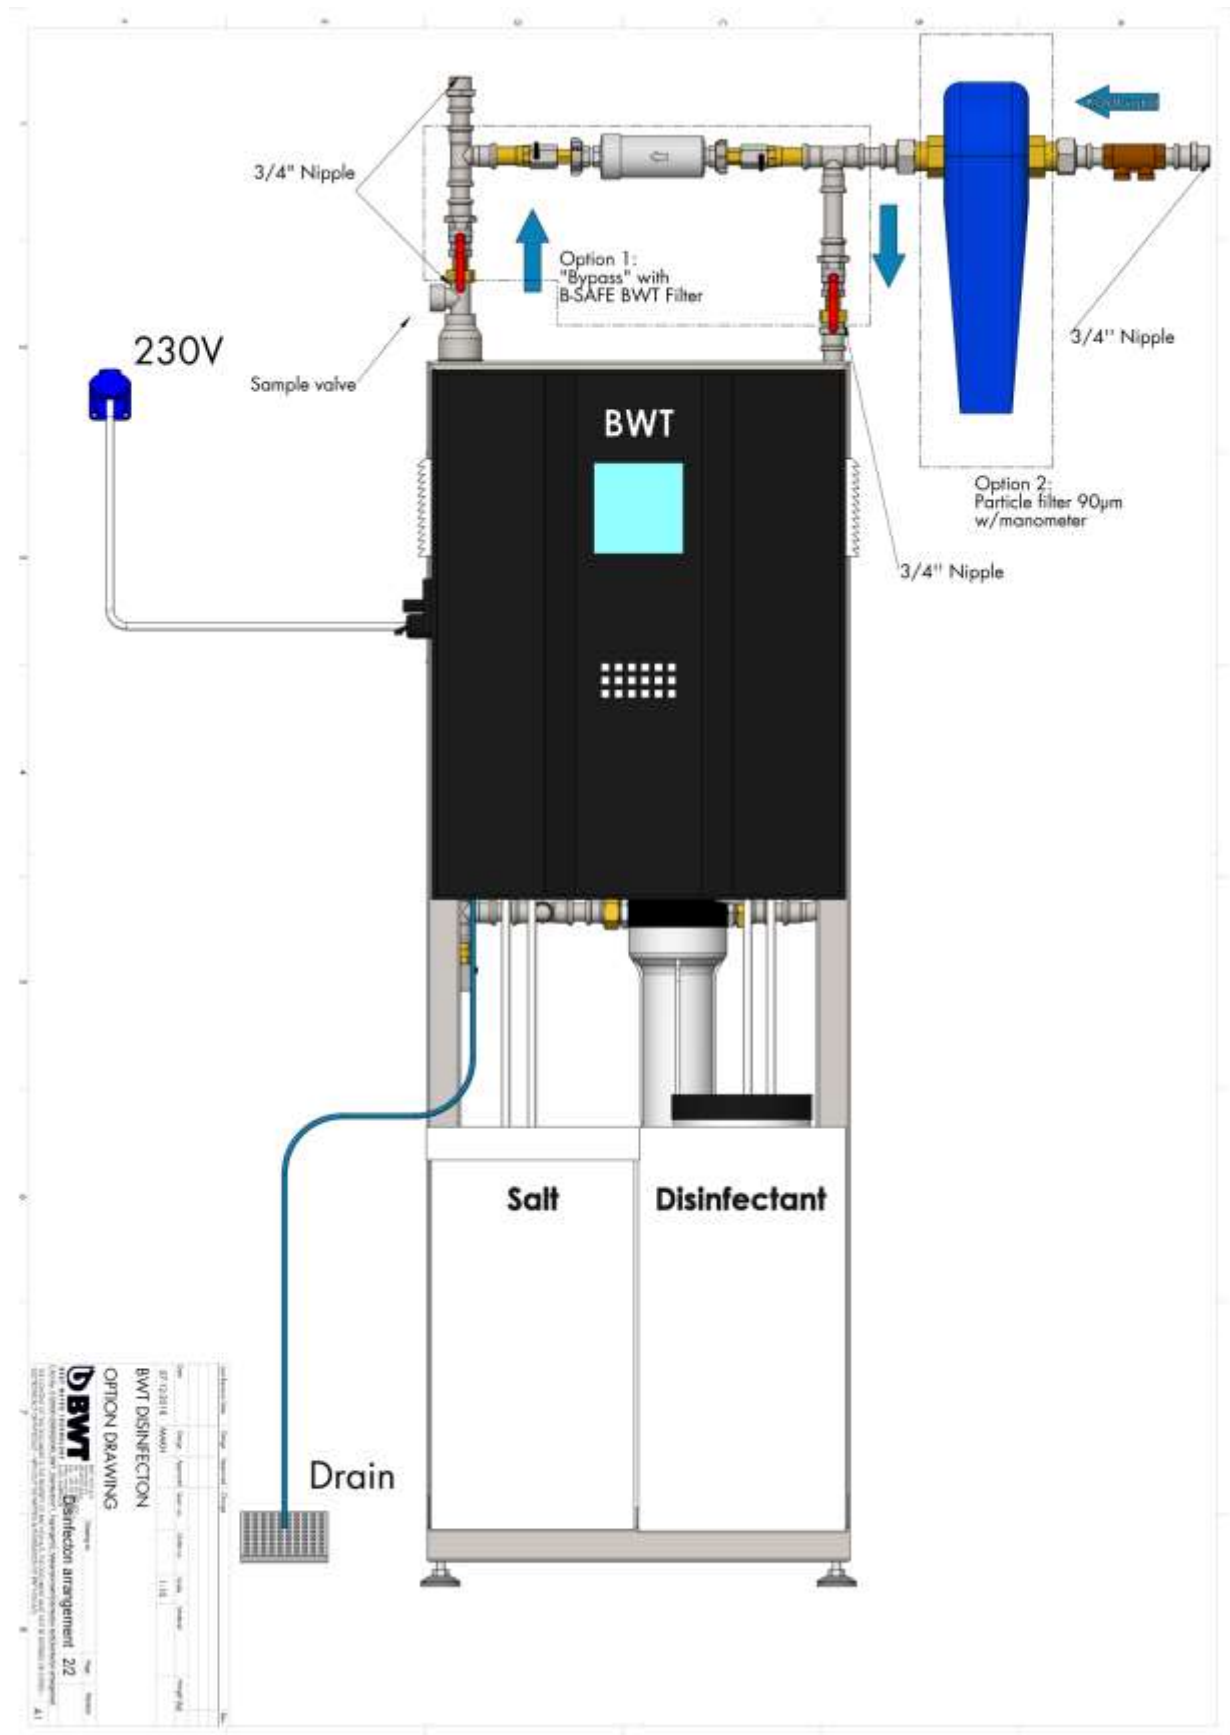

For further information:

BWT HOH A/S

Geminivej 24
DK-2670 Greve
Tel : +45 43 600 500
Fax: +45 43 600 900
E-Mail: bwt@bwt.dk

BWT Birger Christensen AS

Røykenveien 142 A
Postboks 136
N-1371 Asker
Tel : +47 67 17 70 00
Fax: +47 67 17 70 01
E-Mail: firmapost@hoh.no

BWT Vattenteknik AB

Box 9226
Kantygatan 25
SE-213 76 Malmö
Tel : +46 40 691 45 00
Fax: +46 40 21 20 55
E-Mail: info@vattenteknik.se

BWT Separtec OY

PL 19 Varppeenkatu 28
FIN-21201 Raisio
Tel : +358 2 4367 300
Fax: +358 2 4367 355
E-Mail: hoh@hoh.fi

BWT Austria GmbH

Walter-Simmer-Strabe 4
A-5310 Mondsee
Tel : +43 6232 5011 0
Fax: +43 6232 4058
E-Mail: office@bwt.at

BWT Wassertechnik GmbH

Industriestraße 7
D-69198 Schriesheim
Tel : +49 6203 73 0
Fax: +49 6203 73 102
E-Mail: bwt@bwt.de

Cillichemie Italiana SRL

Via Plinio 59
I-20129 Milano
Tel : +39 02 204 63 43
Fax: +39 02 201 058
E-Mail: info@cillichemie.com

BWT France SAS

103, Rue Charles Michels
F-93206 Saint Denis Cedex
Tel : +33 1 4922 45 00
Fax: +33 1 4922 45 45
E-Mail: bwt@bwt.fr

BWT Belgium NM.

Leuvensesteenweg 633
B-1930 Zaventem
Tel : +32 2 758 03 10
Fax: +32 2 758 03 33
E-Mail: bwt@bwt.be

BWE Česká Republika s.r.o.

Lipovo 196 -Cestlice
CZ-251 01 Říčany
Tel : +42 272 680 300
Fax: +42 272 680 299
E-Mail: info@bwt.cz

BWT Polska Sp. z o.o.

ul. Polczyhska 116
PL-01-304 Warszawa
Tel : +48 22 6652 609
Fax: +48 22 6649 612
E-Mail: bwt@bwt.pl

BWT Hungária Kft.

Keleti út. 7.
H-2040 Budaörs
Tel : +36 23 430 480
Fax: +36 23 430 482
E-Mail: bwt@bwt.hu

BWT UK Ltd.

Coronation Road, BWT House
High Wycombe
Buckinghamshire, HP12, 3SU
Tel : +44 1494 838 100
Fax: +44 1494 838 101
E-Mail: info@bwt-uk.co.uk

BWT Nederland B.V.

Centraal Magazijn
Energieweg 9
NL-2382 NA Zoeterwoude
Tel : +31 88 750 90 00
Fax: +31 88 750 90 90
E-Mail: sales@bwt nederland.nl

BWT AQUA AG

Hauptstraße 192
CH-4147 Aesch
Tel : +41 61 755 88 99
Fax: +41 61 755 88 90
E-Mail: info@bwt-agua.ch

OOO Russia BWT

Ul. Kasatkina 3A
RU-129301 Moscow
Tel : +7 495 686 6264
Fax: +7 495 686 7465
E-Mail: info@bwt.ru

Cillit S.A.

C/Silici, 71 -73
Poligono Industrial del Este
E-08940 Cornelia de Llobregat
Tel : +34 93 440 494
Fax: +34 93 4744 730
E-Mail: cillit@cillit.com