



Water Filter Tap

Filter taps are suitable for use with a wide range of drinking water systems and filters. They are available in a number of designs including touch flow and quarter turn models.

Model : Various (tap designs may vary).

Introduction

Thank you for purchasing a BWT water filter tap. For your safety, the following instructions should be adhered to when installing, replacing or undertaking any maintenance to the unit. If you are unsure or have any questions regarding installation, please contact BWT's technical helpline on 01376 334 200.

Contents

- Tap body
- Small black rubber washer
- Chrome cup washer
- Large rubber washer
- Plastic washer
- Shake proof washer
- Brass locking nut
- Plastic tube insert
- Olive
- Compression nut

Considerations

Notes This filter water tap is suitable for both new and existing installations. The instructions overleaf include the mounting of the tap and connection to an existing filter water supply. If the tap is to be used as part of a new installation, then it is important to follow the instructions given in conjunction with those supplied with your filter water kit.

Do not over tighten fittings or stress the main tap body.

Do not mix imperial and metric size flexible pipes and fittings.

Installation

Note: When fitting the tap, please ensure that your installation complies with local plumbing codes and practices. Do not use a wrench or stillsons on the body of the product as this will damage the casing.

Mounting the Tap

Select a suitable position for the Touch Tap assembly. The unit can be fitted either through a worktop or through a stainless steel sink.

Using a pencil, mark the work surface to indicate the centre of the tap and drill a 1/2" hole where marked.

Slide the small black rubber washer (A) over the threaded part of the tap.

Next, slide the chrome cup washer (B) followed by the larger rubber washer (C) over the threaded part of the tap.

Insert the threaded section of the tap body into the 1/2" hole you have drilled.

 
Next, pass the plastic washer (D) over the threaded part of the tap as it protrudes through the hole followed by the shake proof washer (E) and brass locking nut (F).

Twist the tap to your desired position and lock in place using the brass nut and a suitable spanner.

Insert plastic tube (G) into the end of the feed water tube (usually blue in colour) and slide the compression nut (I) and olive (H) over the end.

Insert the open end of the feed water tube assembly into the base of the threaded section of the tap.

Position the olive (H) and tighten the compression nut (I) to ensure a watertight seal.

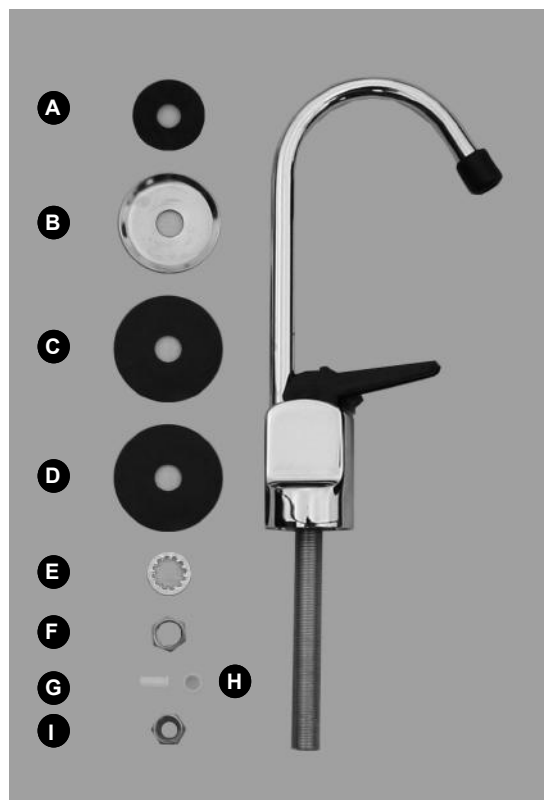

WARNING:
Wear safety glasses to prevent eye injury

Servicing & Maintenance

Check joints regularly for leaks. If a leak is found, contact your plumber, remake joint or replace faulty item.

Warranty Information & Specification

This BWT filter water tap guaranteed against faulty workmanship and materials for one year. The guarantee is only valid if the product has been installed and used in accordance with the manufacturers instructions and has not been dismantled or interfered with in any way. Please register your product by either calling 01376 334 200 or visiting www.waterdial.co.uk.

BWT UK Limited, The Gateway Centre, Coronation Rd, High Wycombe, Buckinghamshire, HP12 3SU

Tel: 01376 334 200

Fax: 01376 334 201

E-mail: enquiries@bwt-uk.co.uk

For You and Planet Blue.

