

BWT EasyCare



The system cleaner

Effectively disinfect and clean mains water systems with filtration and carbonator

The new and highly-effective BWT EasyCare cleaning system will help you to keep your water dispensers hygienically clean during regular use. It is ready-to-use, safe and unique, because there is no comparable alternative on the market. Using it is really easy and safe. So you will also be able to simply clean water dispensers yourself. When doing so, the water dispenser's application and safety information and the BWT EasyCare instructions must be followed.


Typical areas of use of BWT EasyCare:

- » Highly-efficient cleaning and disinfection of water dispensers approved for BWT EasyCare
- » Can be used with all BWT water dispensers



- 1 BWT EasyCare Tab**
Use with integrated cleaning tablets. They are required for every clean and are disposed of after use.

- 2 BWT EasyCare Adapter**
Used to simply and safely connect BWT EasyCare systems. The adapter is reusable!

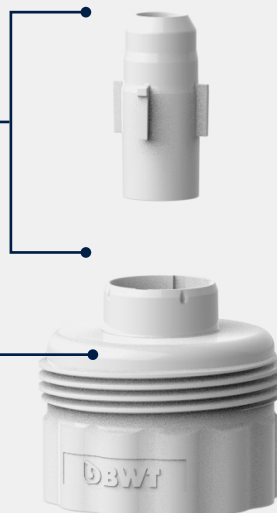

The slightly foamy, chlorine-based detergent also gets into hard-to-reach places, allowing highly-effective and efficient disinfection of appliances.

BWT EasyCare

TECHNICAL DATA

BWT EasyCare		
Nominal flow	l/h	120
Flow variation	l/h	+/-30
Operating pressure	bar	2 till 8
Water inlet temperature (min./max.)	°C	+4 till +30
Ambient temperature (min./max.)	°C	+4 till +40
Order no. BWT EasyCare Adapter		125297204
Order no. BWT EasyCare Tab, single		125297205
BWT EasyCare Tab, big pack (21 tabs)		125501473

Application and use

1. Twist and remove the old filter cartridges from the filter
2. Remove the wrapping from the BWT EasyCare Tab (insert)
3. Put the EasyCare Tab (insert) into the EasyCare Adapter. Please note the arrow on the insert!
4. Turn the EasyCare adapter with the insert to place it in the filter head.
5. Start cleaning programme. Follow the system's cleaning and disinfection instructions.
6. Detergent contact time. Finally, twist the EasyCare Adapter, remove it from the filter head and screw in the new filter cartridge.
7. Dispose of insert.
8. Briefly rinse out the EasyCare Adapter and keep it.

Why cleaning appliances is important

To guarantee the appliance works optimally and provide the best possible water quality, it is necessary to clean and disinfect water dispensers correctly, regularly and professionally. This prevents soiling and inhibits the formation of bacterial growth in the appliance.

Use BWT EasyCare every time you change filters for even more hygiene and safety in your system.

Main benefits

- » **Simple:** The ready-to-use BWT EasyCare Tab insert and the BWT EasyCare Adapter make cleaning child's play.
- » **Safe:** The cleaning tablet is already installed in the BWT EasyCare Tab, meaning direct contact is avoided. The BWT EasyCare Adapter is self-sealing.
- » **Versatile:** The BWT EasyCare Adapter can be used with all BWT filter heads.
- » **Maintained:** Your appliance will be cleaned and disinfected very efficiently, providing more hygiene and safety.
- » **Environmentally-friendly:** The BWT EasyCare Adapter can be reused again and again, only the BWT EasyCare Tab insert has to be thrown away. Meaning there's almost no waste.



MANUFACTURER: SALES:

BWT Holding GmbH:
Walter-Simmer-Str. 4
5310 Mondsee, Austria
bwt-wam.com

**BWT water+more
Deutschland GmbH:**
info@water-and-more.de
Tel.: +49 611 58019-0

 **BWT**
water + more